

# EYEZONE B1080PX-4

## User Manual



Feb 24, 11

## FCC Notices

It's herewith confirmed to comply with the requirements of FCC Part 15 Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generated uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio of television reception, which can be determined by turning the equipment off or on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

## CE Declaration

This product has been assessed against the following Applicable Standards.

EN 55022:2006/A1: 2007(Class B)	EN 55024: 1998/ A1:2001/ A2:2003
EN 61000-3-2: 2006	IEC 61000-4-2: 1995/ A1:1998/ A2:2000
EN 61000-3-3: 1995/ A1:2001/ A2:2005	IEC 61000-4-3: 2006
	IEC 61000-4-4: 2004
	IEC 61000-4-5: 2005
	IEC 61000-4-6: 2006
	IEC 61000-4-8: 2001
	IEC 61000-4-11: 2004

Printed in Taiwan R.O.C.

All contents are subject to change without notice.

All trademarks are the property of their respective owner.

# CONTENTS

1. Package Contents.....	4
2. Introduction.....	4
3. Features.....	5
4. Hardware Overview.....	6
5. Remote Control.....	7
5.1 Entering Text or IP Address.....	7
6. Start the B1080PX.....	8
7. Setting Up.....	9
7.1 Network Setup.....	9
7.2 FTP Setup.....	14
7.3 Video Setup.....	16
7.4 Other Setup.....	17
7.5 Scrolling Text Setup.....	19
8. Using the B1080PX.....	20
8.1 Play Media Files on the Memory Card.....	20
8.2 2D/ 3D Videos Playback.....	22
8.3 Multi-Zone Display Function.....	23
8.4 RS-232 Function.....	29
8.5 Log Function.....	30
9. Http Command Function.....	31
9.1 Control.....	32
9.2 Network.....	33
9.3 Server.....	34
9.4 Time.....	35
9.5 Features.....	36
9.6 Reboot.....	36
10. Schedule Function.....	37
10.1 Install the Schedule Software.....	37
10.2 Start the Schedule Software.....	38
10.3 Apply the Schedule on the B1080PX.....	42
11. Optional Auxiliary Equipment.....	43
11.1 LED Button Box.....	43
11.2 Play-Button Box.....	44
11.3 Touch-Sensor Buttons.....	45
11.4 IR Cable.....	46
11.5 PIR Sensor.....	46
11.6 USB Auto-Copy Function.....	47
12. Troubleshooting.....	48

# 1. PACKAGE CONTENTS

1. B1080PX-4
2. Remote Control
3. Memory Card Protective Cover
4. Quick Guide
5. Video & Audio Cable
6. Power Adapter
7. CD Driver
  - Schedule Software
  - IP Detect Tool
  - User Manual
8. RS232 Cable (optional)
9. VGA to YPbPr Cable (optional)
10. CF Card (optional)



# 2. INTRODUCTION

The Eyezone B1080PX Series is a high-class Digital Signage with high-end performance (40Mbps). The advanced technology provides the smoothest and clearest image for playing advertising contents. The B1080PX Series is one of the best stand-alone Digital Signage in the world.

The B1080PX-4 supports multi-zone and multi-media display function. You can use XML to simply design multi-zone layout and play different types of content in each zones on one screen, including stored video or HD video (from HDMI sources), images, date, time and scrolling text. You can also change background image and text color.

The B1080PX-4 is an ideal for advertising, retail displays, digital poster, museum exhibits and other applications.


### 3. FEATURES

- Supports 3D contents playback for 3D TV or projector.
- The source of HD WMV9 MP@HL (Main Profile / High Level) supports resolution up to 1920x1080 (1080P) and the maximum bit rate is 40Mbps.
- Supports multiple file formats: Music (WMA), Picture and Movie (WMV9).

#### NOTE:

1. The recommended video format is WMV9 (resolution: 1080p/ bit rate: 35~40Mbps).
  2. You can use Windows Media Encoder 9.0 to convert your video to WMV9 format.
- Supports Video, Y.Pb.Pr, HDMI, VGA and Audio output.
  - HDMI 1.1, 1.2 and 1.3 compliant.
  - HDMI Output resolution: 480P/ 720P/ 1080i/ 1080P.
  - VGA output resolution: 640x480/ 800x600/ 1024x768/ 1280x1024/ 1360x768/ 1366x768.
  - Supports HDMI input to display videos from HDMI sources (such as DVD player or Game Console).
  - Supports bidirectional RS-232 communication (Transmit / Receive).
    - **Receive:** Using ASCII command to control B1080PX (play, stop, pause...).
    - **Transmit:** The transmit function can be customized to fit your project requirements.  
Example: To control your device (such as TV, speakers or DVD player) to turn on/off, volume up/ down or mute.
  - **Multi-Zone Display Function**
    - Create your own custom layout via XML.
    - Supports different types of content: Include video, images, date, time and scrolling text.
    - The background image and text color can also be changed.
  - **Schedule Function:** The B1080PX will auto play the specific file at the specific date.
  - **Supports Log Function** which can record the file and time that was be played.
  - **Connect using an Ethernet network cable** at up to 100Mbps.
  - **Supports CF memory cards.**
  - **Supports HTTP Control Function**
  - **Supports Auto Key Lock Function**
  - **Exports the Configuration Value:** You can export the configuration value to the memory card. The configuration value can be modified on your PC, and can be applied to the B1080PX or others.
  - **Supports FTP Auto Download Function:** Connect to Remote FTP server and download data to the memory card automatically.
  - **Play files and FTP Auto Download Simultaneously:** The B1080PX can play files while downloading.
  - **Bundle Remote Management Software (POP Center)**
    - Standard Version (free): Manage up to 5 B1080PX.
    - Professional Version (need charge): Manage up to 100 B1080PX.
    - Automatically search the connected B1080PX without any complicated setup.
    - Set multi-display modes
    - Update scrolling text message.
    - Upload contents
    - Schedule playlists at different times of the day or days of the week
    - Monitor status and log files of each B1080PX

### 4. HARDWARE OVERVIEW

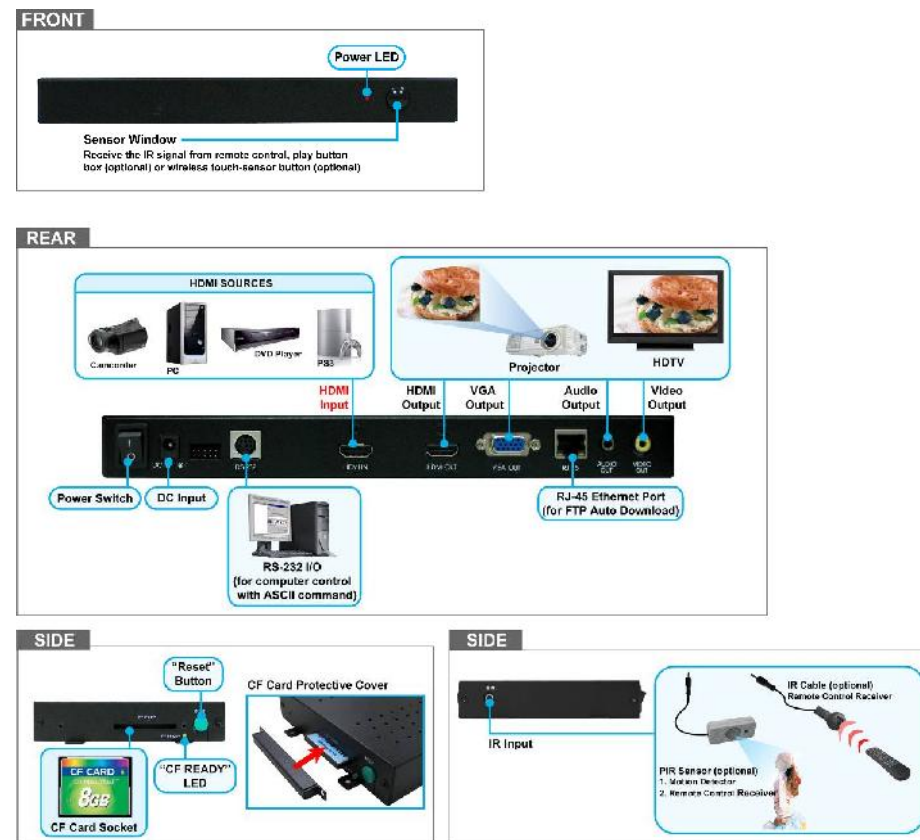

- **Power Switch:** Toggle between main power on & off.
- **DC Input:** For the power adapter. (DC 12V / 1.5A)
- **RS-232 Connector:** Used for computer control with ASCII command.
- **HDMI Input:** Connects to HDMI sources (DVD player or Game Console).
- **HDMI Output:** Connects to devices that support HDMI input.
- **VGA Output:** Connects to devices that support VGA input. (LCD 、 projector)
- **RJ-45 Ethernet Connector:** Connects to router or PC by RJ-45 Cable.
- **Audio Output:** Connects to sound input. (HDTV with amplified speaker)
- **Video Output:** Connects to devices that support Video input. (HDTV 、 projector)
- **IR Input:** Connects to optional PIR Sensor or optional IR cable.
- **"CF READY" LED:** Steady green confirms that the CF card is inserted correctly.
- **CF Card Socket:** For CF memory card.
- **"RESET" Button:** To restart the B1080PX.

## 5. REMOTE CONTROL




- 1 Power on/ off
- 2 Select the output mode
- 3 Numeric Key
- 4 Delete last entry
- 5 Select a function or to play the selected file
- 6 Open the setup menu Mute sound
- 7 OSD display function on/ off
- 8 Auto-play function on/ off
- 9 Mute sound
- 10 Volume up/ down
- 11 Move the cursor
- 12 Confirm the selection/ entry
- 13 Go back one layer
- 14 Select the TV type (NTSC/ PAL)
- 15 Shuffle on & off
- 16 Play the file selected
- 17 View the previous/ next file
- 18 Select the repeat mode
- 19 Rewind/ forward movie or music files
- 20 Stop playback
- 21 Show the information of the file selected
- 22 Search video (movie) timeframe
- 23 Zoom in/ out on the movie or picture
- 24 Pause the playback or play frame by frame

### 5.1 ENTERING TEXT OR IP ADDRESS

- Keys need to be pressed multiple times to enter the letter corresponding to that key.  
**For Example:** To enter the letter "a". You would press the button "2" twice.
- **Enter The IP Address**  
**For Example:** To enter the IP address "192.168.100.100".  
**Step 1:** Press "1" once, then "1" is displayed, and the color of "1" is orange.  
**Step 2:** When the color of "1" turns white, press "9" once, then "9" is displayed.  
**Step 3:** Repeat steps 1 and 2 to enter and complete the IP address.

## 6. START THE B1080PX

- **Turn On**
  - Insert the CF memory card that has Picture, Music, Movie or WMV9 files.
  - Connect the provided power adapter and turn on the power switch, then the B1080PX will power on automatically.
  - If there is no picture on your TV, press the "TV MODE" button to select the correct output mode.
- **Status After Power On**
  - **Status 1:** If the "AUTOPLAY (Movie/ Picture/ All Files/ MultiLayer/ HDMI In)" function is enabled and there are media files on the memory card, the B1080PX will auto play media files after power on.
  - **Status 2:** If the "AUTOPLAY" function is disabled, after power on the main menu will appear as shown in the following figure. There are two groups in the main menu ("/mnt/" and "SETUP").

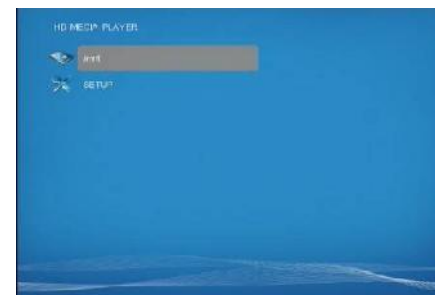

- **Turn Off:** Turn off the power switch to turn the B1080PX off.


## 7. SETTING UP

- In the main menu, using the “▼” button on remote control to select the “**SETUP**” item, and then press the “ENTER” button. You will be presented with the B1080PX settings screen.
- You can also press the “**SETUP**” button on remote control to directly open the settings screen. (If there is file that is being play, please stop first.)
- There are five groups of sub-menu in the main menu (“Network Setup”, “FTP Setup”, “Video Setup”, “Other Setup” and “Scrolling Setup”).
- In the settings screen, you can use the “▲、▼、◀、▶” buttons to select an item, and press the “ENTER” button to confirm the selection.
- Press the “SETUP” button on remote control to save and quit the settings screen.



## 7.1 NETWORK SETUP

### 7.1.1 Setting the Network from the OSD Menu

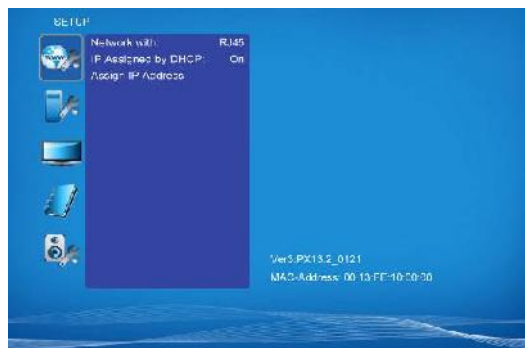

- **Network with:** Select your network connection (Disable/ RJ45).
- **IP Assigned by DHCP:** If you have a DHCP-enabled router, please select “On”, and then the router will automatically assigns an IP address to the B1080PX. If you don't have a DHCP –enabled router, select “Off” and type the network information in “**Assign IP Address**”.


- **Assign IP Address:** If the B1080PX is connected to a network without a DHCP server or you want to use Local FTP Server function, please manually enter the fixed IP address, Mask, Gateway and DNS for the B1080PX.

#### PS. Refer to 5.1 for how to enter IP address by remote control.

**NOTE:** Before setting the IP address, Mask, Gateway and DNS, check the network information of your PC. Please follow the steps below to get the network information of your PC.

**Step 1:** Click on “Start” → “Run” and type in “command”, then press “ENTER”.

The MS-DOS window will appear, type in “ipconfig” and then press “ENTER” to get the network information.

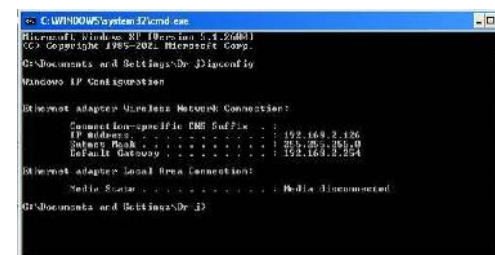

**Step 2:** Assign IP Address, Mask (Subnet Mask) and Gateway (Default Gateway) for the B1080PX.

Enter the same values of the Subnet Mask and Gateway, and be careful not to enter the values of IP address that are already used by other devices on the network.




## 7.1.2 Setting the Network from the IP Detect Tool

With the bundle tool “IP Detect”, user could search B1080PX on the local area network (LAN). You could also change the IP setting via this tool. For example, user might assign a static IP to B1080PX by the steps as below:


**Step1:** Insert the driver CD into your CD-ROM drive, then the autorun function will start up the shell program. If the autorun window does not display, please execute the Autorun.exe program to bring out the autorun screen.

**Step2:** Click on the **Install IP Detect** to install the IP detect tool.




**Step3:** Double click on the  icon to start the tool.

**Step4:** Click on the “Auto Detect” button, then the tool will show all available B1080PX in the local area network.

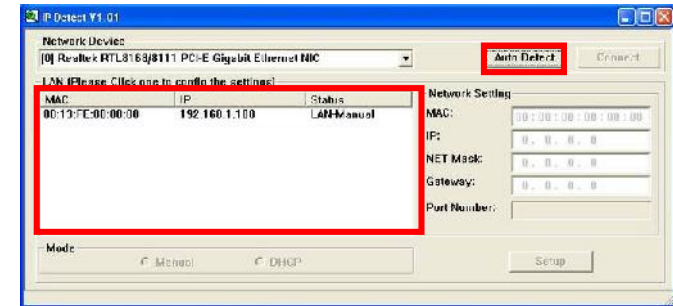

**NOTE:** When use B1080PX under a DHCP-enabled network, user sometimes does not know which IP address is assigned to B1080PX. User could also use this tool as a “Finder”, for locating the IP address of B1080PX. By pressing the “Connect” button, IE browser will show up and access to the build-in web of B1080PX automatically.


**Step5:** Select the B1080PX that you want to configure (by identifying the MAC address).

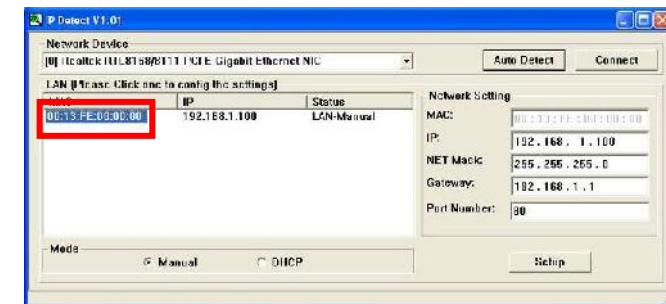


Click **Next** to continue



Select the installation folder and click **Next** to continue

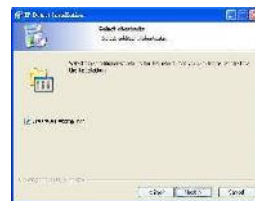

Create a desktop icon and click **Next** to continue

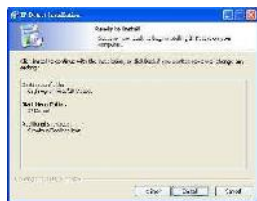

Click **Install** to start the installation




Installing



Click **Finish** to complete the installation

**Step6:** The default IP mode of B1080PX is DHCP. If you want to assign a static IP address to B1080PX, you should change the mode to “Manual”. Then enter the preferred “IP”, “Net Mask” and “Gateway” in the “Network Setting”. Finally, click on the “Setup” button for completing the setting.

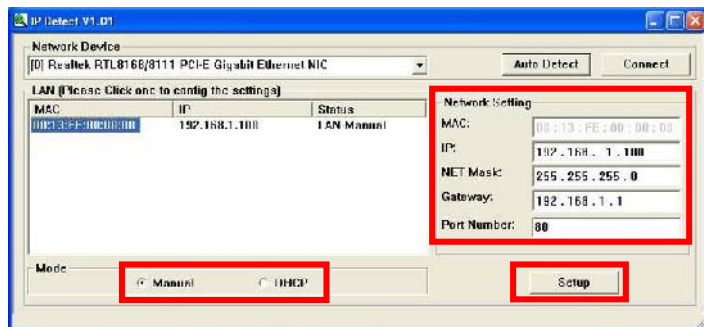


**NOTE:** The IP setting will not show on the OSD menu instantly, but it should be available after pressing “Setup” button. The prefer IP address will show on the OSD menu when B1080PX restart.

## 7.2 FTP SETUP



- **Local FTP Server:** Turn on/ off the B1080PX server.  
(If you use the B1080PX server, please disable the DHCP function and input a fixed IP address, Mask, Gateway and DNS of the B1080PX)
- **Local FTP Server Setup:** Set the “Port”, “User ID” and “Password” of the B1080PX.  
(The Default Port: 21, User ID: root, Password: admin)
- **FTP Auto Download:** Enable/ Disable the FTP auto download function.
- **Remote FTP Download Setup**
  - **Server IP:** Enter the domain name or IP address of the FTP as was given to you by your Web hosting provider.
  - **Port:** The default port for FTP is 21. In most cases you should not change this number. If the FTP site uses a port other than 21, you should enter the correct port.
  - **User ID:** Enter the user name of the Remote FTP server.
  - **Password:** Enter the Password of the Remote FTP server.
  - **FTP Path:** Enter the folder path that you want to share.
- **NTP Server:** Enable/ Disable the NTP server function. (if the B1080PX isn't connect to internet, please disable the NTP Server function)
- **Time Setup:** Set the **NTP Server** and **Local Time** here.

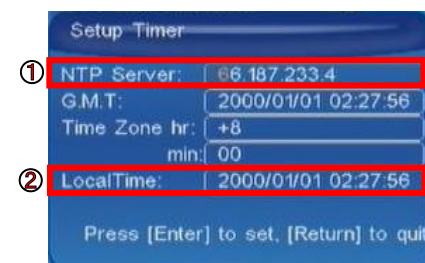

- ① **NTP Server** (the B1080PX must be already connected to the network)
  - **NTP Server:** Enter the NTP server IP address like: 204.152.184.72.
  - **G.M.T.:** After B1080PX get the time from NTP server, it will update the G.M.T field.
  - **Time Zone:** Use the **Volume +, -** and **Numeric Key** to set the time zone of your location.  
(time zone must be set properly for the **Auto-Download** and **Schedule** functions)

**NOTE: GMT and applied regions**

Time Zone	Region
(GMT-12:00)	Eniwetok, Quazalen
(GMT-11:00)	Midway, Ireland, Samoa
(GMT-10:00)	Hawaii
(GMT-09:00)	Alaska
(GMT-08:00)	Pacific GMT (U.S. & Canada); Tijuana
(GMT-07:00)	Continental GMT (U.S. & Canada)
(GMT-07:00)	Arizona
(GMT-06:00)	Mexico city
(GMT-06:00)	Saskatchewan
(GMT-06:00)	Eastern Coast GMT (U.S. & Canada)
(GMT-06:00)	Indiana (Eastern Coast)
(GMT-04:00)	Atlantic GMT (Canada)
(GMT-04:00)	Santiago
(GMT-04:00)	Caracas, La Paz
(GMT-04:00)	Newfoundland
(GMT-03:00)	Greenland
(GMT-03:00)	Buenos Aires, Georgetown
(GMT-03:00)	Brasilia
(GMT-02:00)	Mid-Atlantic
(GMT-01:00)	Capo Verde Is.
(GMT-01:00)	Azores
(GMT-00:00)	Greenwich GMT; Dublin, Edinburgh, Lisbon, London
(GMT-00:00)	Casablanca, Monrovia
(GMT+01:00)	Beograd, Bratislava, Budapest, Ljubljana, Prague
(GMT+01:00)	Brussels, Copenhagen, Madrid, Paris
(GMT+01:00)	Sarajevo, Skopje, Sofia, Vilnius, Warsaw, Zagreb
(GMT+01:00)	Midwest Africa
(GMT+01:00)	Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna
(GMT+02:00)	Bucharest
(GMT+02:00)	Athens, Istanbul, Minsk
(GMT+02:00)	Jerusalem
(GMT+02:00)	Cairo
(GMT+02:00)	Harare, Pretoria

Time Zone	Region
(GMT+02:00)	Helsinki, Riga, Tallinn
(GMT+03:00)	Nairobi
(GMT+03:00)	Moscow, Saint Petersburg, Volgograd
(GMT+03:00)	Baghdad
(GMT+03:00)	Kuwait, Raid
(GMT+03:30)	Tehran
(GMT+04:00)	Baku, Tbilisi, Ere van
(GMT+04:00)	Abu Dhabi, Muscat
(GMT+04:30)	Kabul
(GMT+05:00)	Yekaterinburg
(GMT+05:00)	Islamabad, Karachi, Tashkent
(GMT+05:30)	Calcutta, Chennai, Mumbai, New Delhi
(GMT+05:45)	Katmandu
(GMT+06:00)	Sri Jayewardenepura Kotte
(GMT+06:00)	Astana, Dakar
(GMT+08:00)	Irkutsk, Ulan Bator
(GMT+08:00)	Kuala Lumpur, Singapore
(GMT+08:00)	Taipei
(GMT+08:00)	Perth
(GMT+09:00)	Seoul
(GMT+09:00)	Yakutsk
(GMT+09:00)	Osaka, Sapporo, Tokyo
(GMT+09:30)	Darwin
(GMT+09:30)	Adelaide
(GMT+10:00)	Guam, Port Moresby
(GMT+10:00)	Brisbane
(GMT+10:00)	Vladivostok
(GMT+10:00)	Canberra, Melbourne, Sydney
(GMT+10:00)	Hobart
(GMT+11:00)	Magadan, Solomon Is., New Caledonia
(GMT+12:00)	Auckland, Wellington
(GMT+12:00)	Fiji, Kamchatka Pen., Marshall Is.
(GMT+13:00)	Nuku'alofa


② **Local Time:** Set the system time manually.

**NOTE:** If the B1080PX is already connected to the network, and the NTP Server and Local Time have been set, the NTP Server will be the first priority.

- **Local HTTP Server:** Enable/ Disable the HTTP command function.
- **Local HTTP Server Setup:** To set the “Port”, “User ID” and “Password” of the B1080PX. (The Default Port: 80, User ID: root, Password: admin)
- **Group Setup:** Set the B1080PX group. The machine groups allow you to organize machines (B1080PX) by function, location or another category that is meaningful for your installation (please refer to **POP Center** manual on driver CD for more detail about Group function).

**NOTE:** Press the “SETUP” button on the remote control to save the settings, and it will auto exit the settings screen, then restart the B1080PX.

## 7.3 VIDEO SETUP

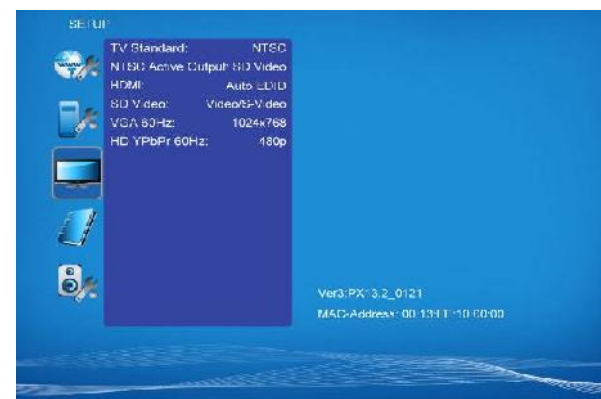

- **TV Standard:** Select the output TV video format (NTSC / PAL).
- **NTSC Active Output:** Select the output mode (HDMI/ SD Video/ VGA/ HD YPbPr).
- **HDMI:** Select the HDMI output resolution among 480i / 480p/ 720p / 1080i/ 1080p. Select the “Auto EDID”, the B1080PX will scan the display device connected and set the correct resolution automatically.
- **SD Video:** Select the SD output mode (“Video/ S-Video” or “YCbCr”).
- **VGA 60Hz:** Select the VGA output resolution. (640\*480 / 800\*600/ 1024\*768/ 1280\*1024/ 1360\*768/ 1366\*768)
- **HD YPbPr 60Hz:** Select the Y.Pb.Pr output resolution among 480p / 720p / 1080i.



## 7.4 OTHER SETUP




- **Play OSD Display:** Enable or disable the OSD display.
- **Auto Play**  
 Movies: Play movies on the memory card automatically after the unit is powered on.  
 Pictures: Play pictures on the memory card automatically after the unit is powered on.  
 All Files: Play all the media files on the memory card automatically after the unit is powered on.  
 MultiLayer: Directly execute Multiple Display function after the B1080PX is powered on.  
 HDMI-In: Play the video from HDMI input automatically after B1080PX is powered on.  
 Off: Turn off the Auto Play function.
- **SlideShow Interval:** Set the time each photo is shown to 10, 15, 30 seconds or 1, 10, 15, 30 minutes or 1 hour.
- **Lock Remote Controller:** Enable/ disable the auto key lock function. (The B1080PX will auto lock when there is no further input for 1 minute.)
- **Lock Password Setup:** Press the “Enter” button to open the “Set Password” window. Enter the password with numeric buttons and press the “Enter” button to save the new password (The default password: 000).



## 7.4 OTHER SETUP (continued)

- **Export Setting File:** Press the **Enter** button to export the configuration value to the memory card.

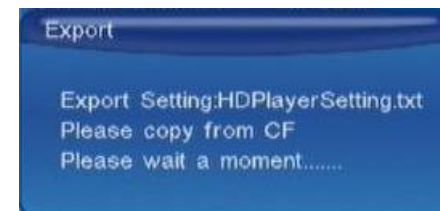

**Step1:** Copy the file “HDPlayerSetting.txt” on memory card to your PC. Use the “Wordpad” to open the file, and you can see all the configuration value of B1080PX.

**Step2:** You can modify directly the configuration value on your PC.

**Example:** [NETWORK] Disable Options: Disable, RJ45, WiFi

The “Network” function is disabled, you can directly change the mode to RJ45.

```
[NETWORK] Disable Options: Disable, RJ45, WiFi
[DHCP] On Options: On, Off
[IPAddress] 192.168.1.100 IPAddress
[Mask] 255.255.255.0 NetMask
[Gateway] 192.168.1.1 GateWay
[DNS] 168.95.1.1 DNS
```



```
[NETWORK] RJ45 Options: Disable, RJ45, WiFi
[DHCP] On Options: On, Off
[IPAddress] 192.168.1.100 IPAddress
[Mask] 255.255.255.0 NetMask
[Gateway] 192.168.1.1 GateWay
[DNS] 168.95.1.1 DNS
```

**Step3:** Copy the completed file “HDPlayerSetting.txt” from PC to memory card. Insert the memory card to the B1080PX, the B1080PX will apply the new settings automatically.

- **Play Button:** Only for used with play buttons. The B1080PX supports two options (Repeat Default / Repeat All) when the demo file finishes playing.
- **Log Function:** Enable or disable the Log function.
- **Auto Power:** Enable or disable the Auto Power function. If this function is enabled, user might set a definite time for B1080PX to power on/off automatically.
- **AutoPower Setting:** Press “Enter” button on the remote controller, the “PowerOn” setting window will pop up. User could set the power on/off time here.



## 7.5 Scrolling Text Setup



- **Multiple Display:**
  - **Movie (full):** Display videos (full screen) with scrolling text.
  - **Movie (small):** Display videos (original size) with scrolling text.
  - **Movie + PIC (L):** Play videos and pictures with scrolling text, and the pictures are on the left.
  - **Movie + PIC (R):** Play videos and pictures with scrolling text, and the pictures are on the right.
  - **Layout:XML:** Use XML to play different types of content in each zones on one screen.
- **Picture Slide:** Set the mode of picture slideshow (**By Slide Time/ Match Video**).
- **Scrolling text:** Select the font that the user wants to use in the scrolling text. Support fonts are: Latin1, Latin2, Japanese and Greek.
- **Scrolling text color:** Select the color of the text; user might select white, yellow and green.
- **Scrolling text background:** Turn on or off the background of the scrolling text.
- **Scrolling text speed:** Adjust the speed of the scrolling text.
- **RS232 Control**
  - **Command:** Control the B1080PX by using ASCII command.
  - **Barcode:** Enable the Barcode function.
  - **Led Button Box:** Enable the Led Button Box function.
  - **Off:** Turn off the RS232 control function.
- **Transition effect:** Set transition effects for your photo slideshow.

## 8. USING THE B1080PX


### 8.1 PLAY MEDIA FILES ON THE MEMORY CARD

**Step 1:** Insert the memory card with media files, then turn on the B1080PX and press the “ENTER” button on the remote control when “mnt/CF” is highlighted to take you into the memory card.




**Step 2:** Select the type of data (VIDEO/ AUDIO/ PICTURES) you want to play, and then press the “ENTER” button on remote control to take you into the “VIDEO LIBRARY”, “AUDIO LIBRARY” or “PICTURE LIBRARY”.



**Note:** If the symbol  (return) appears on the screen, you can use “RETURN” button of the remote control to go back one layer.

**Step 3:** Select the file you want to play, and press “ENTER” or “PLAY” button on the remote control to play the file.

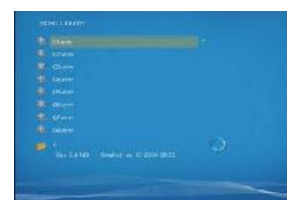

VIDEO LIBRARY



AUDIO LIBRARY



PICTURE LIBRARY

## 8.1.1 Using the Remote Control When Media File Is Playing

- **SETUP:** Press the button to adjust the brightness, contrast or saturation while the **video** or **picture** is playing. With the “+ VOLUME –” button.

- **First Press:** Adjust the brightness.
- **Second Press:** Adjust the contrast.
- **Third Press:** Adjust the saturation.



Brightness




Contrast



Saturation

- **MUTE:** Mute the sound while the movie or music is playing.
- **+ VOLUME -:** Increase/ decrease the volume while the **video** or **music** is playing.
- **SHUFFLE:** Turn on/ off the shuffle function.
- **PREV / NEXT:** Play the previous/ next file.
- **REPEAT:** Select the repeat mode.
- **REV / FWD:** Rewind/ forward movie or music file.
- **STOP:** Stop playing, and go back one layer.
- **INFO:** Display the file information.

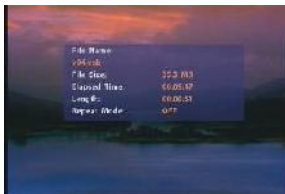

File Information

- **SERACH:** Search video (movie) timeframe

Press the “SEARCH” button, and enter the initial time that you want to start at, then press the “ENTER” button to play.



- **PAUSE/STEP:** Pause the playback or play frame by frame.
- **ZOOM:** Zoom in/ out on the movie or picture.



Original Size



First Press : ZOOM 01



Second Press : ZOOM 02



Third Press : ZOOM 03

## 8.2 2D/ 3D VIDEOS PLAYBACK

The B1080PX will automatically switch the 2D/ 3D playback mode by filename.

- The file named “xx\_2Dxxx.xxx”, and the B1080PX will switch to **2D Display mode** automatically.
- The file named “xx\_3Dxxx.xxx”, and the B1080PX will switch to **3D Display mode** automatically.



**xx\_2Dxxx.xxx**  
(ex: 00\_2Dvideo.wmv)



**xx\_3Dxxx.xxx**  
(ex: 00\_3Dvideo.wmv)

## 8.3 MULTI-ZONE DISPLAY FUNCTION

### 8.3.1 Simple Mode (include one video, one image and scrolling text)

**Step 1:** Put movies, pictures (only supports **PNG** format/ size: 213x641/ 96DPI) and text file on CF card.

#### Picture Files


If you select the **"By Slide Time"** item of the picture slide mode; please name the picture files 0.png ~ 9.png.

If you select the **"Match Video"** item of the picture slide mode, the file name of the picture must be the same of the corresponding movie file.

#### Text File

Use the "Notepad" to create a text file on your PC. Enter the message that you want to display and named the file **"message.txt"**.

**Step 2:** Select the **Multiple Display Zones** item to display the movies and pictures with scrolling text immediately.

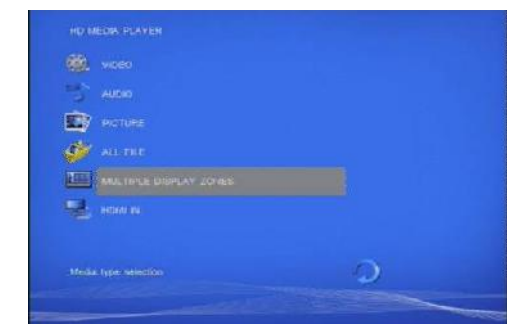

### 8.3.2 Simple Mode (include HD video, image and scrolling text)

**Mode 1: Only play HD Videos from HDMI sources.**



**Step1.** Connect the HDMI source (DVD Player, TV Box or game console) to HDMI input of B1080PX.

**Step2.** Refer to section 7.5 **Scrolling Text Setup** to set the **Multiple Display** mode to **Movie (full)** option, and turn off the background of scrolling text.

**Step3.** Select the **HDMI In** item to directly play the HD video on your screen.



**Mode 2: Play HD videos with scrolling text.**




**Step1.** Connect the HDMI source (DVD Player, TV Box or game console) to HDMI input of B1080PX.

**Step2.** Use the "Notepad" to create a text file that you want to play on your PC and named the file **"message.txt"**. Put the scrolling text file on CF card.

**Step3.** Refer to section 7.5 **Scrolling Text Setup** to set the **Multiple Display** mode to **Movie (full)** option, and set the text color and turn on the background of scrolling text.



**Step4.** Select the **HDMI In** item to directly play the live video and scrolling text on your screen.

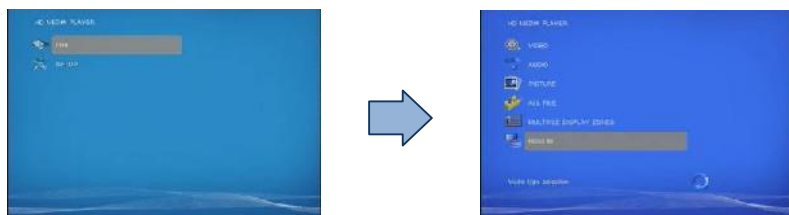

### Mode 3: Play HD videos, pictures and scrolling text simultaneously



**Step1.** Connect the HDMI source (DVD Player, TV Box or video console) to HDMI input of B1080PX.

**Step2.** Create up to 10 pictures (only supports **PNG** format/ size: 213x641/ 96DPI) and named the pictures 0.png ~ 9.png.


**Step3.** Use the **Notepad** to create a text file that you want to play on your PC and named the file **"message.txt"**

**Step4.** Copy the pictures (0.png ~ 10.png) and scrolling text file (message.txt) to CF card.

**Step5.** Refer to section 7.5 **Scrolling Text Setup** to set the Picture Slide mode to **“By Slide Time”**

option, and set the **Multiple Display** mode to **Movie + PIC (L)** or **Movie + PIC (R)** option, and set the text color and turn on the background of scrolling text.


**Step6:** Select the **HDMI in** item to directly play the live video, pictures and scrolling text simultaneously on your screen.

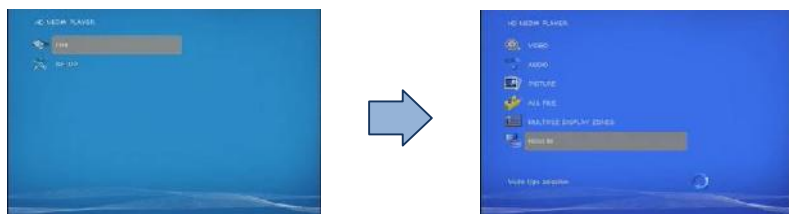

### 8.3.3 Advance Mode (create your own custom layout via XML)

This section provides the playlist that created the provided demo file, so you can see how the playlist controls the provided demo file.

**Step1:** Use the “Notepad” to open the XML file of provided demo file on your PC.

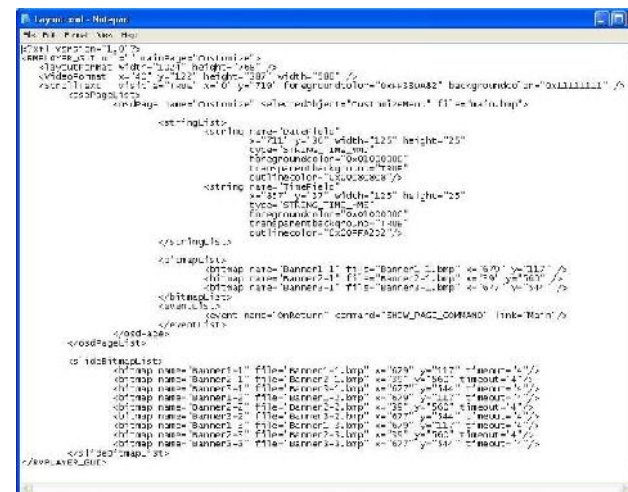


In this example, the screen is divided into seven zones including one video zone, three image zones, date, time and scrolling text.

- Zone1 is the main video zone.
- Zone2 is the date zone.
- Zone3 is the time zone.
- Zone4, 5 and 6 are the three image zones

**NOTE:** Background Image: BMP format/ filename: main.bmp/ Size: 1024x768

Slide Image: BMP format/ Size: 311x403 (zone4)/ 590x112 (zone5)/ 314x143 (zone6)

- Zone7 is the scrolling text zone.

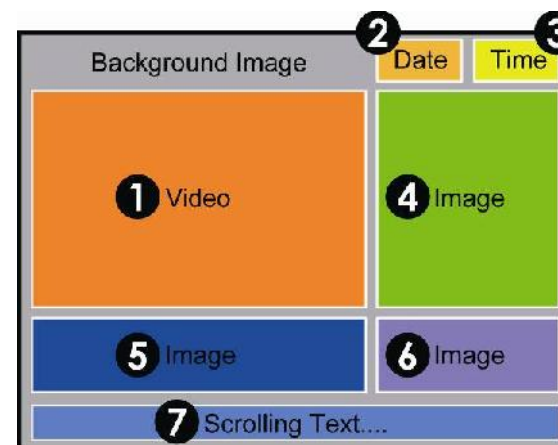



#### ■ Zone 1 (Video Zone)

```
<VideoFormat x="40" y="122" height="387" width="588" />
```

- x="40" y="122": Sets the location of the video zone on the screen.
- height="387" width="588": Sets the size of the video zone.

#### ■ Zone 2 (Date Zone)

```
<string name="DateField"
  x="711" y="36" width="125" height="25"
  type="STRING_TIME_YMD"
  foregroundcolor="0x01000000"
  transparentbackground="TRUE"
  outlinecolor="0x00C8C8C8"/>
```

- x="711" y="36": Sets the location of the date zone on the screen.
- width="125" height="25": Sets the size of the date zone.
- foregroundcolor="0x01000000": Sets the foreground text color for Date.
- transparentbackground="TRUE": Enable (TRUE)/ disable (FALSE) the transparent background.
- outlinecolor="0x00C8C8C8": Set the outline color for Date.

#### ■ Zone 3 (Time Zone)

```
<string name="TimeField"
  x="857" y="37" width="125" height="25"
  type="STRING_TIME_HMS"
  foregroundcolor="0x01000000"
  transparentbackground="TRUE"
  outlinecolor="0x00FFA2D2"/>
```

- x="857" y="37": Sets the location of the date zone on the screen.
- width="125" height="25": Sets the size of the time zone.
- foregroundcolor="0x01000000": Sets the foreground text color for Time.
- transparentbackground="TRUE": Enable (TRUE)/ disable (FALSE) the transparent background.
- outlinecolor="0x00FFA2D2": Set the outline color for Time.

#### ■ Zone 4, 5 & 6 (Image Zones)

```
<bitmap name="Banner1-1" file="Banner1-1.bmp" x="679" y="117" />
<bitmap name="Banner2-1" file="Banner2-1.bmp" x="39" y="560" />
<bitmap name="Banner3-1" file="Banner3-1.bmp" x="677" y="544" />
```

- Sets the location of the image zones on the screen.

```
<bitmap name="Banner1-1" file="Banner1-1.bmp" x="679" y="117" timeout="4"/>
<bitmap name="Banner2-1" file="Banner2-1.bmp" x="39" y="560" timeout="4"/>
<bitmap name="Banner3-1" file="Banner3-1.bmp" x="677" y="544" timeout="4"/>
<bitmap name="Banner1-2" file="Banner1-2.bmp" x="679" y="117" timeout="4"/>
<bitmap name="Banner2-2" file="Banner2-2.bmp" x="39" y="560" timeout="4"/>
<bitmap name="Banner3-2" file="Banner3-2.bmp" x="677" y="544" timeout="4"/>
<bitmap name="Banner1-3" file="Banner1-3.bmp" x="679" y="117" timeout="4"/>
<bitmap name="Banner2-3" file="Banner2-3.bmp" x="39" y="560" timeout="4"/>
<bitmap name="Banner3-3" file="Banner3-3.bmp" x="677" y="544" timeout="4"/>
```

- Sets the image files you want to play and the order in which you want to play them.
- timeout="4": Sets the slideshow display change time (4 seconds).

#### ■ Zone 7 (Scrolling Text Zones)

```
<ScrollText visible="TRUE" x="0" y="719" foregroundcolor="0xFF33DA82"
backgroundcolor="0x11111111" />
```

- visible="TRUE": Enable (TRUE)/ disable (FALSE) the scrolling text display..
- x="0" y="719": Sets the location of the scrolling text zone on the screen.
- foregroundcolor="0xFF33DA82": Sets the foreground text color for Scrolling Text.
- backgroundcolor="0x11111111": Sets the background color of scrolling text.

**Step2:** Put the demo files (includes video files, background image (main.bmp), slide image (Banner1-1.bmp, Banner1-2.bmp, Banner1-3.bmp, Banner2-1.bmp, Banner2-2.bmp, Banner2-3.bmp, Banner3-1.bmp, Banner3-2.bmp and Banner3-3.bmp), XML file (Layout.xml) and scrolling text file (message) to CF card.

**Step3.** Insert the CF card into the B1080PX, and the B1080PX will run the multi-zone display function automatically.

#### NOTE:

1. Make sure the **Auto Play** item is set to **"MultiLayer"** (refer to section 7.4), and the **Multiple Display** item is set to **"Layout:XML"** (refer to section 7.5).
2. If you want to play the HD video from HDMI source on the video zone, please confirm the HDMI source (DVD player, TV Box or game console) is already connected to the B1080PX, and make sure the **Auto Play** item is set to **"HDMI-IN"** (refer to section 7.4).

## 8.4 RS-232 FUNCTION (RS-232 cable is optional)

**Step1:** Using the RS-232 cable (optional) to connect the B1080PX to your PC.



**Step2:** Make sure the RS232 function is enabled (refer to section 7.5 <RS232 Control> → <Command>).

**Step3:** Use the tool “Tera Term” or other tools to control the B1080PX with ASCII command.

- The available baud rate is “19200”.
- The reaction time of B1080PX is around three seconds.

### Keyboard Layout

q : POWER	+ : VOL +	w : SLOW
R : RETURN	- : VOL -	> : NEXT
! : REPEAT	* : MUTE	< : PREW
~ : SETUP	S : SELECT	u : UP
# : TV MODE	p : PLAY	d : DOWN
% : AutoPlay	P : PAUSE/STEP	l : LEFT
i : INFO	x : STOP	r : RIGHT
m : NTSC/PAL	f : FFW	s : ENTER
\$ : SEARCH	b : REW	C : CLEAR


(XXXXX.XXX) : Play The File (xxxxx.xxx is the file name)  
**NOTE : Must include the round brackets.**  
 [number]: Play the file by index. (numbers < upper case letters < lowercase letter)

## 8.5 LOG FUNCTION

**Step1.** Please turn on the **Log Function** first. (Refer to 7.4 Other Setup)


**Step2** .The new log files are automatically generated every day (the log files will be stored in the “syslog” folder on the memory card).

**Step3.** The log file (.txt) can be viewed on your PC using **WordPad**.

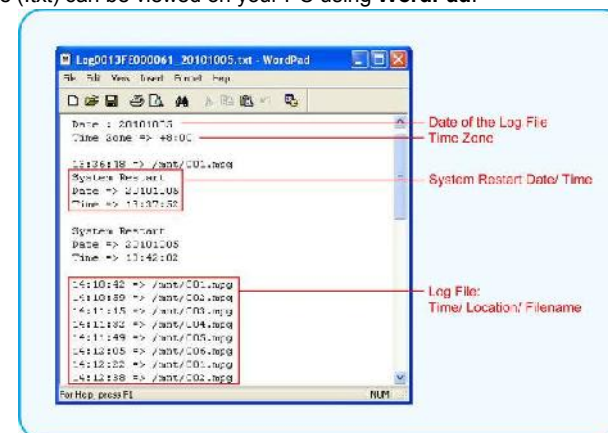

## 9. HTTP COMMAND FUNCTION

- Confirm that the B1080PX is already connected to the network. (Refer to 7.1)
- Confirm the “**Local HTTP Server**” function has been enabled, and the “**Local HTTP Server Setup**” set has been completed (refer to 7.2).
- Set your router or firewall, and open a port 80 for the B1080PX. The following figure is an example, please refer to your user's manual of router for opening ports.

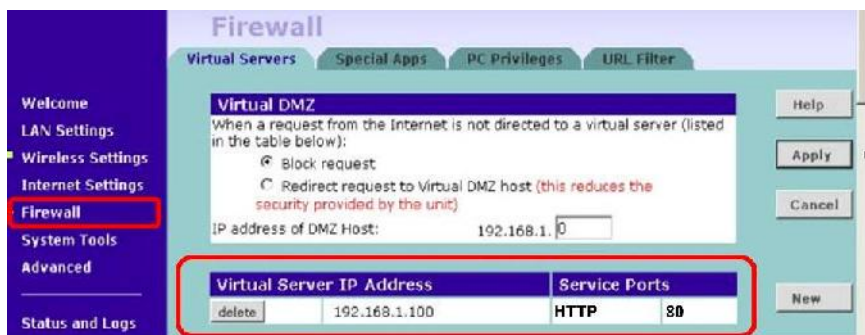


- **Start IE Browser on PC and type the HTTP site or IP:**  
In the local PC, please type “http://192.168.1.100”.  
In the remote PC, please type “http://61.30.13.40:80”.
- Type the “User Name”, “Password” and click “OK” to log on. (**Default User Name:** root **Default Password:** admin)



- There are six items: “Control”, “Network”, “Server”, “Time”, “Features” and “Reboot”.



## 9.1 CONTROL

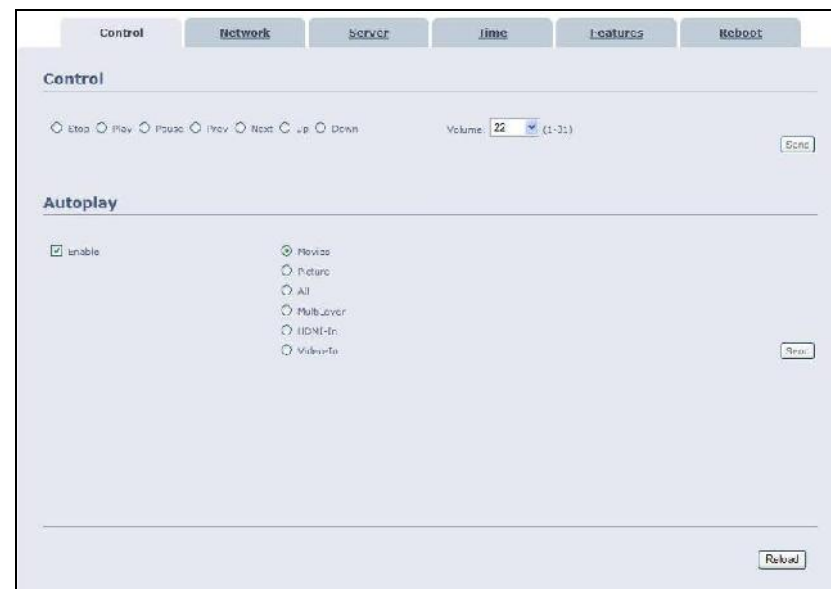

- **Control:** Select one of the control commands, and press the “Send” to control the B1080PX immediately.
  - **Stop:** Stop playback
  - **Play:** Start playback.
  - **Pause:** Pause the playback.
  - **Prev:** Play the previous file.
  - **Next:** Play the next file.
  - **Up:** Move the cursor up.
  - **Down:** Move the cursor down.
  - **Volume:** Adjust the volume.
- **Autoplay:** Select the auto play mode.
  - **Enable:** Enable or disable the auto play function.
  - **Movies:** Play movies on the memory card automatically after the unit is powered on.
  - **Pictures:** Play pictures on memory card automatically after the unit is powered on.
  - **All:** Play all the media files on memory card automatically after the unit is powered on.
  - **Multi Layer:** Directly execute Multiple Display function after the B1080PX is powered on.
  - **HDMI In:** Play the video from HDMI source automatically after the B1080PX is powered on (only for B1080PX-4).
  - **Video In:** Play the live videos from video source automatically after the B1080PX is powered on (only for B1080PX-5).

9.2 NETWORK

Control

Network

Server

Time

Features

Reboot

Network

☒ Enable

Interface: ☒ Ethernet  
☐ Wireless

Send

General Setup

☐ Enable DHCP  
(automatic configuration)

IP: 192.168.1.12

Subnet: 255.255.255.0

Gateway: 192.168.1.254

DNS server: 191.1.1.1

Send

Wireless Setup

SSID: default

Encryption mode: WEP/64bit

Key / Passphrase: \*\*\*\*\*

Send

Reload

- **Network**
  - **Enable:** Enable or disable the network function.
  - **Interface:** Select your network connection Ethernet (wired) or Wireless.
- **General Setup**
  - **Enable DHCP:** Enable or disable the DHCP function.
  - **IP/ Subnet/ Gateway/ DNS server:** Enter the fixed IP address, Subnet, Gateway and DNS for the B1080PX.
- **Wireless Setup (only for B1080PW)**
  - **SSID:** Enter the SSID.
  - **Encryption mode:** Select an encryption mode.
  - **Key/ Passphrase:** The key you enter here must match the password of the device exactly.

9.3 SERVER

Control

Network

Server

Time

Features

Reboot

Download from FTP Server

☒ Enable

Port: 21

IP address: 192.168.1.28

Path: /tmp/

User name: root

Password: \*\*\*\*\*

Send

Local FTP Server Setup

☒ enable Local FTP server

Port: 21

ID: root

Password: \*\*\*\*\*

Send

FTP Server Address: [ftp://192.168.1.28:21](#)

Reload

- **Download from FTP Server**
  - **Enable:** Enable or disable the FTP auto download function.
  - **Port:** The default port for FTP is 21. In most cases you should not change this number. If the FTP site uses a port other than 21, you should enter the correct port.
  - **IP address:** Enter the domain name or IP address of the remote FTP server.
  - **Path:** Enter the folder path that you want to share.
  - **User name:** Enter the user name of the remote FTP server.
  - **Password:** Enter the password of the remote FTP server.
- **Local FTP Server Setup**
  - **Enable:** Turn on/ off the B1080PX server.
  - **Port:** Enter the port of the B1080PX
  - **ID:** Enter the user name of the B1080PX (**default ID: root**).
  - **Password:** Enter the password of the B1080PX (**default password: admin**).
- **FTP Server Address:** Click on the address to directly connect to the B1080PX server. Enter the user name and password (Default User Name: **root**, Default Password: **admin**) to log on. After logging on all the media files on the memory card will be listed. You can download and upload the media files between memory card and your PC.

FTP Server

FTP Server: 192.168.1.28


User name: root

Password: admin

After logging on, you can directly download or upload files and folders to the device.

☐ Auto download

OK Cancel

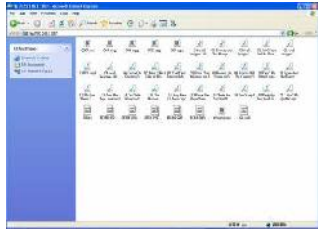

## 9.4 TIME

The screenshot shows the 'NTP Server' configuration page. At the top, there are tabs for 'Control', 'Network', 'Server', 'Time', 'Features', and 'Reboot'. The 'Time' tab is selected. The page has a title 'NTP Server'. Below the title, there is a checkbox labeled 'Enable' which is checked. To the right of the checkbox, there are input fields for 'GMT Server' with the value '66.187.233.4' and 'Time Zone' with the value '18 hours 0 min'. There is a 'Send' button to the right of the 'Time Zone' field. At the bottom right of the page, there is a 'Reload' button.

### ■ NTP Server

- **Enable:** Enable or disable the NTP server function.
- **GMT Server:** Enter the NTP server IP address like: 66.187.233.4.
- **Time Zone:** Set the time zone of your location.

## 9.5 FEATURES

The screenshot shows the 'Features' configuration page. At the top, there are tabs for 'Control', 'Network', 'Server', 'Time', 'Features', and 'Reboot'. The 'Features' tab is selected. The page has a title 'Web Interface'. Below the title, there is a checkbox labeled 'Enable' which is checked. To the right of the checkbox, there are input fields for 'Port' with the value '80', 'User ID' with the value 'root', and 'Password' with the value '\*\*\*\*\*'. There is a 'Send' button to the right of the 'Password' field. Below the 'Web Interface' section, there is a section titled 'Web Auth'. Below 'Web Auth', there is a checkbox labeled 'Enable Auth' which is unchecked. There is a 'Send' button to the right of the 'Enable Auth' checkbox. Below the 'Web Auth' section, there is a section titled 'Scrolling Text'. Below 'Scrolling Text', there is a text input field. There is a 'Send' button to the right of the text input field. At the bottom right of the page, there is a 'Reload' button.

### ■ Web Interface

- **Enable:** Enable or disable the HTTP command function.
- **Port:** Enter the port of the B1080PX (**default port: 80**)
- **User ID:** Enter the user name of the B1080PX (**default ID: root**).
- **Password:** Enter the password of the B1080PX (**default password: admin**).

■ **Web Auth:** Select the “Enable Auth” checkbox to enable the function, and you will need to enter the username (root) and password (admin) to login.

■ **Scrolling Text:** Enter the message that you want to display, and press “Send” to display the scrolling text message on the screen immediately (the message you entered through the http function will not be stored on memory card).

## 9.6 REBOOT

The screenshot shows the 'Reboot' page. At the top, there are tabs for 'Control', 'Network', 'Server', 'Time', 'Features', and 'Reboot'. The 'Reboot' tab is selected. The page has a title 'Reboot'. Below the title, there is a link labeled 'System Reboot'.

- Click on the **System Reboot** to restart the B1080PX.



## 10. SCHEDULE FUNCTION


**NOTE: The “NTP Server” or “Local Time” must be set before using the Schedule**

**Function. (refer to 7.2)**


### 10.1 INSTALL THE SCHEDULE SOFTWARE

**Step1:** Insert the driver CD into your CD-ROM drive, then the autorun function will start up the shell program. If the autorun window does not display, please execute the Autorun.exe program to bring out the autorun screen.

**Step2:** Click on the **Install Schedule Maker** to install the schedule software.

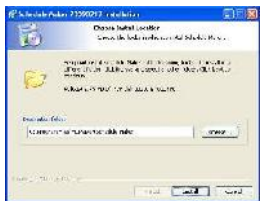


Select the installation folder and click **Install** to continue

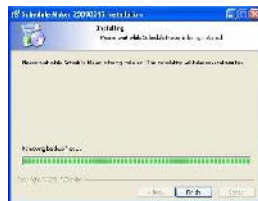

Installing




Click **Finish** to complete the installation

**Step3:** After installing the schedule software, the “Schedule Maker” icon (  ) should appear on your desktop. Or you could also find the shortcut of “Schedule Maker” by click on < Start > → < Programs > → < Schedule Maker 20090217 > → < Schedule Maker >.

### 10.2 START THE SCHEDULE SOFTWARE


- You might double click the “Schedule Maker” icon on your desktop for opening the “Schedule Generator”. Or you might click on <Start> → <Programs> → <Schedule Maker 20090217> → <Schedule Maker > for starting the program.
- There are two parts of program: “Basic Schedule” and “Advance Schedule” in the window.

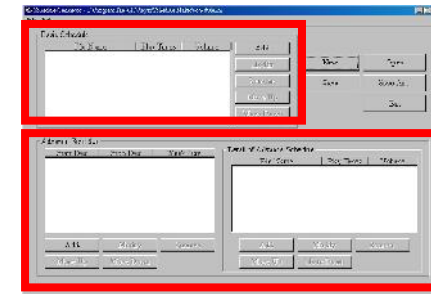

#### 10.2.1 Basic Schedule


In the “Basic Schedule” mode, you could arrange a basic schedule that instructs the player to play specified video files in the ordinary time. You could also set up the play times of each video file on the schedule.

- **Add:** Click this button to chose a video file. The following diagram appears:
  - Click on “**Add Video In**” button for instructing the player to play the HDMI input only (only for B1080PX-4).
  - Click the “**Browser**” button to search for files that you want to add. You can also set up the “Play Times” and “Volume” of the file in this window. Click the “**OK**” button to complete the setup.
  - Click the “**Add**” button again to add other file. If you choose “Video In” in the previous step, the “**Add**” button will be blank. That means you want the player to play the “Video In” in the ordinary time. And if you’d like the player switching between the “Video In” and video files in the specific time, you might combine a Video In Basic Schedule with an Advance Schedule function.
  - **COPY Function:** Click the “**Copy to...**” button to copy directly the added file to the memory card.

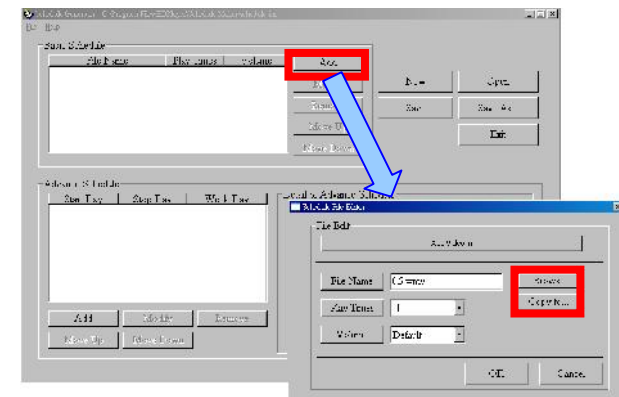


- **Modify:** Click this button to modify the file in the list.

- Select the file that you want to modify in the list, and press the **"Modify"** button.

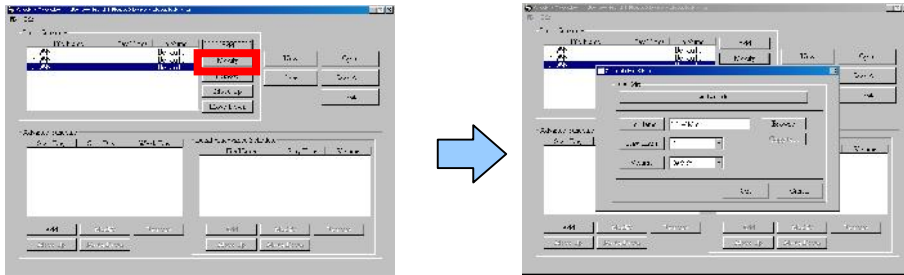


- **Remove:** Click this button to remove the file from the list.


- Select the file that you want to remove from the list, and press the **"Remove"** button to delete.

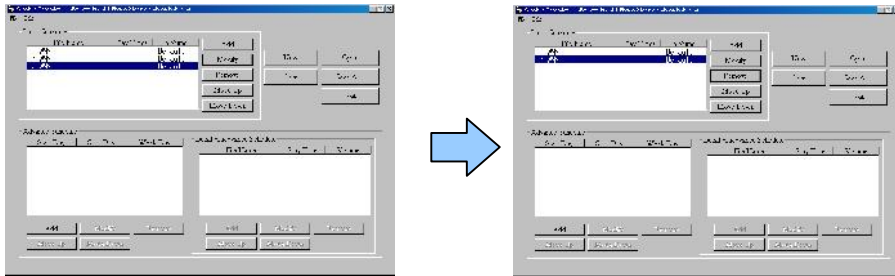

- **Move Up / Move Down:** Click these buttons to change the order that the files are played.

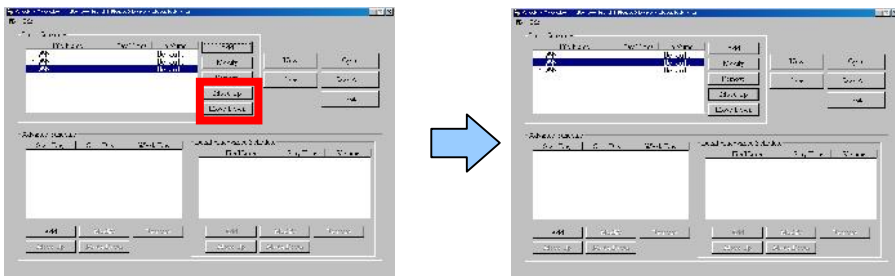


- **SAVE:** Press the **"SAVE"** button and a pop-up window will appear. Select the path, then click the **"SAVE"** button to save your setup.

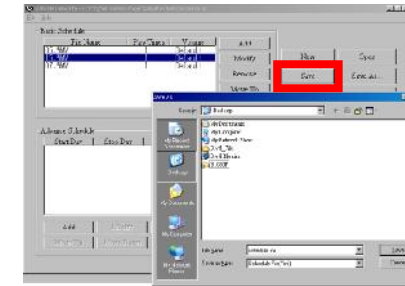


**NOTE:** Do not rename the file (schedule.ini), otherwise the B1080PX will not be able to read the file.

## 10.2.2 Advance Schedule


In the "Advance Schedule" mode, you can select files that you want to play, and can also set up the play times, and the initial and end time of each file. There are "Time Setup" and "File Setup" in the "Advance Schedule".

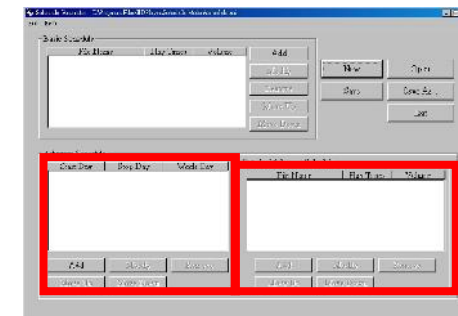


**Step 1:** Click the "Add" button in the "Time Setup" section to open the "Advance Schedule Editor" window. Set up the Start and Stop Date, Start and Stop Time and the Week Day, then click "OK" to quit the window.

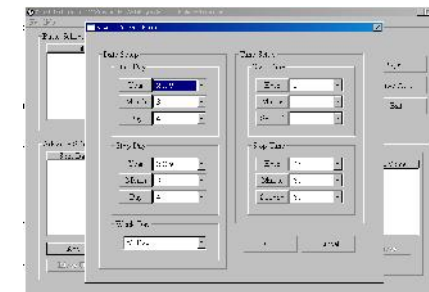

**Step 2:** Click the “Add” button in the “File Setup” section to open the “Schedule File Editor” window. Click the “Browser” button to select a file that you want to play. You can also set up the “Play Times” of the file in the window. Click the “OK” button to complete the setup.

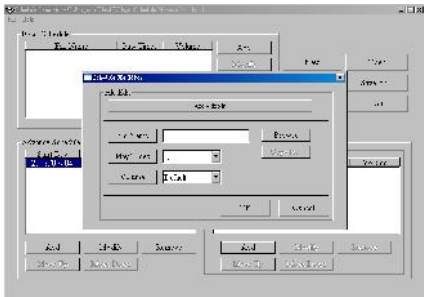

**Step 3:** Repeat the steps 1 and 2 to add other files.

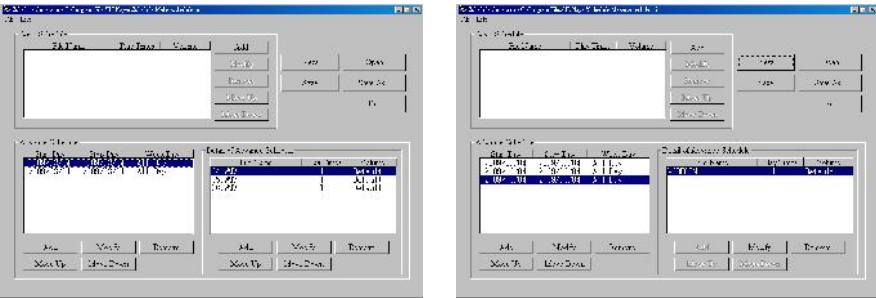

**Step 4:** After finishing all setup, press the “SAVE” button and a pop-up window will appear. Select the path, then click the “SAVE” button to save.

**NOTE:** Do not rename the file (schedule.ini), otherwise the B1080PX will not be able to read the file.

### 10.2.3 Explanation of the Warning Message

■ **No any schedule! ! Can't Save!**

There is no schedule file in the “Basic Schedule” or “Advance Schedule” can be saved. Please add and edit a new schedule file first.



■ **Date Setup Error!**

There are some errors in the “Advance Schedule”. Check the date/ time of the schedule for conflict or error.



■ **No any schedule file in advance schedule! ! Can't Save! !**

There is no schedule file in the advance schedule. Please add files that you want to play in the advance schedule.




### 10.3 APPLY THE SCHEDULE ON THE B1080PX

Put the “schedule.ini” file and the associated media files on the memory card, and insert the memory card to the B1080PX. The B1080PX will auto play the files at the designated time.

# 11. OPTIONAL AUXILIARY EQUIPMENT

## 11.1 LED BUTTON BOX

### ■ Hardware Installation

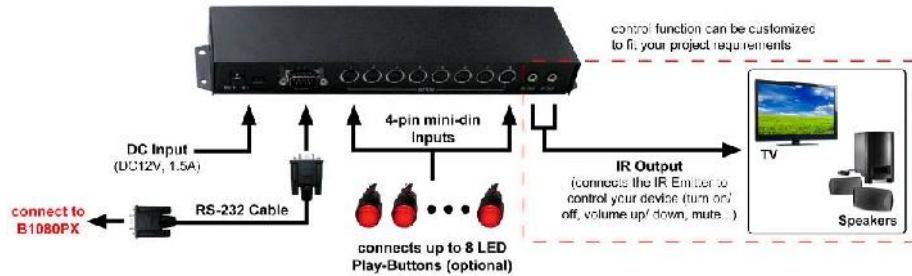

### ■ Control Video Playback using the LED Play-Button

#### ex. 5 LED Play-Buttons (supports up to 8 LED Play-Buttons)

**Step1.** Put 6 demo files on memory card. (1 default file and 5 demo files)

**NOTE:** The files are sorted by filename in ascending order alphanumerically (numbers < upper case letters < lowercase letter). Each button is mapped to a file by this order.

#### For Example:

There are 6 demo files on the memory card. The file names are a01.xxx, 33.xxx, b55.xxx, 1abc.xxx, 07.xxx and A01.xxx. (xxx is extension of the file)

Default File: 07.xxx      Demo File 1: 1abc.xxx      Demo File 2: 33.xxx

Demo File 3: A01.xxx      Demo File 4: a01.xxx      Demo File 5: b55.xxx

**Step2.** Insert the memory card to the B1080PX, and the B1080PX will play the default file automatically while powered on.

**Step3:** Make sure the **Play Button** item is set **Repeat Default** (refer to section 7.4 <Play Button> → <Repeat Default>)

**Step4:** Make sure the **RS232 Control** item is set **Led Button Box** (refer to section 7.5 <RS232 Control> → <Led Button Box>)

**Step5:** Restart the B1080PX, and it will play the default file repeatedly.

**Step6.** Press one of the buttons 1-5 to play the corresponding demo file. The B1080PX will automatically play the default file when the demo file finishes playing.

### ■ Status of the LED Play-Buttons


- **Status1.** When none of the LED play-buttons are pressed, all the LED play-buttons will stay blinking and the B1080PX will play the default file repeatedly.
- **Status2.** Press one of the LED play-buttons, the B1080PX will play the corresponding file and the pressed LED play-button will light constantly, and the other LED play-buttons will go off.

## 11.2 PLAY-BUTTON BOX

- Using the play-buttons to control the video playback (press one of the play buttons (up to 12 play-buttons) to play the corresponding file).
- Dimension (L/ W/ H): 116x81x22mm.
- **Hardware Connection**



- Supports wired and wireless modes.

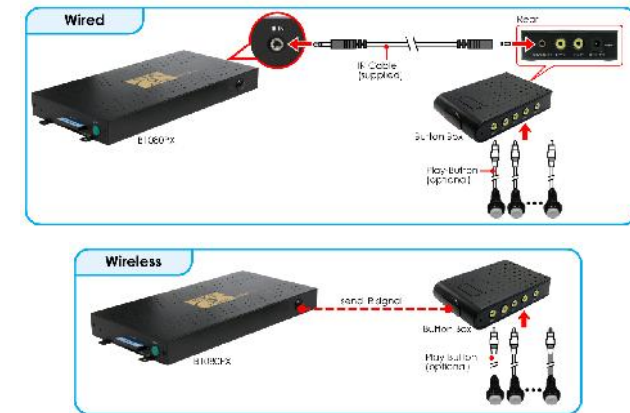

### ■ Play the Media File By the Play-Button

#### ex. 5 Play-Buttons (supports up to 12 play buttons)

**Step1.** Put 6 demo files on memory card. (1 default file and 5 demo files)

**NOTE:** The files are sorted by filename in ascending order alphanumerically (numbers < upper case letters < lowercase letter). Each button is mapped to a file by this order.

#### For Example:

There are 6 demo files on the memory card. The file names are a01.xxx, 33.xxx, b55.xxx, 1abc.xxx, 07.xxx and A01.xxx. (xxx is extension of the file)

Default File: 07.xxx      Demo File 1: 1abc.xxx      Demo File 2: 33.xxx

Demo File 3: A01.xxx      Demo File 4: a01.xxx      Demo File 5: b55.xxx

**Step2.** Insert the memory card to the B1080PX, and the B1080PX will play the default file automatically while powered on.

**Step3.** Press one of the buttons 1-5 to play the corresponding demo file.

**Step4.** The B1080PX supports two options (Repeat Default / Repeat All) when the demo file finishes playing. The functions can be set in the setup menu. (Other Setup → Play Button)

- **Repeat Default:** The B1080PX will automatically play the default file when the demo file finishes playing.
- **Repeat All:** The B1080PX will automatically play all the demo files when the demo file finishes playing.

## 11.3 TOUCH-SENSOR BUTTONS

### 11.3.1 Features of the Touch-Sensor Buttons

- The number of touch-sensor buttons can be customized to 12, 24 or 36 for OEM project.
- Used with various operating environment (glass, plastics and acrylic material, except metal material), the thickness supports 3mm -5mm.



### 11.3.2 Demo Files

#### Ex. Using the wireless 5 Touch-Sensor Buttons

- Put 6 demo files on memory card. (1 default file and 5 demo files)

**NOTE:** The files are sorted by filename in ascending order alphanumerically (numbers < upper case letters < lowercase letter). Each button is mapped to a file by this order.


#### For Example:

There are 6 demo files on the memory card. The file names are a01.xxx, 33.xxx, b55.xxx, 1abc.xxx, 07.xxx and A01.xxx. ( xxx is extension of the file )

Default File: 07.xxx	Demo File 1: 1abc.xxx	Demo File 2: 33.xxx
Demo File 3: A01.xxx	Demo File 4: a01.xxx	Demo File 5: b55.xxx

### 11.3.3 Connect to the Touch-Sensor Buttons

- Open the battery cover and set the batteries (AA size) as shown below. Please note that the polarity of the battery.

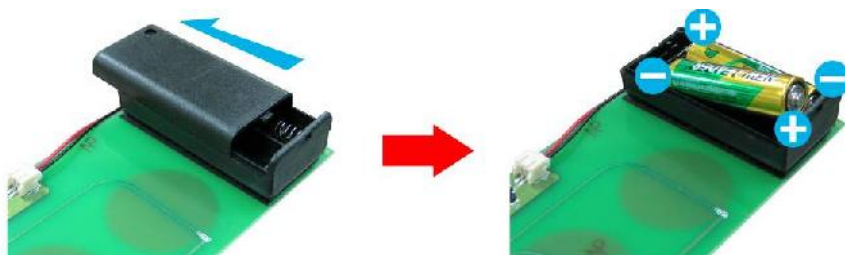

### 11.3.4 Play the Demo Files

**Step1.** Insert the memory card to the B1080PX, and the B1080PX will play the default file automatically while powered on.


**Step2.** Press one of the touch-sensor buttons 1-5 to play the corresponding demo file.

**Step3.** The B1080PX supports two options (Repeat Default / Repeat All) when the demo file finishes playing. The functions can be set in the setup menu. (Other Setup → Play Button)

- **Repeat Default:** The B1080PX will automatically play the default file when the demo file finishes playing.
- **Repeat All:** The B1080PX will automatically play all the demo files when the demo file finishes playing.


## 11.4 IR Cable

The IR cable is an external remote control receiver (directly connect the IR Cable to the IR IN).

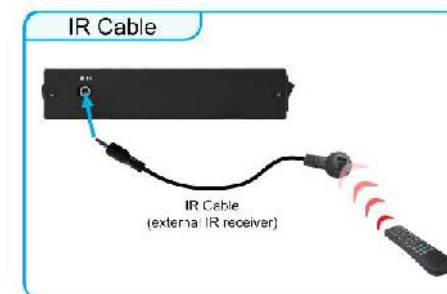

## 11.5 PIR SENSOR

- **Application 1:** The PIR Sensor is an external remote control receiver.
- **Application 2:** The PIR Sensor is a motion detector.

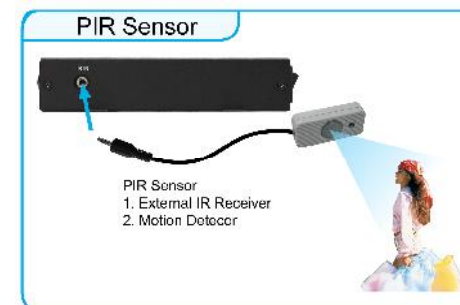



## ■ Using the PIR Sensor

**Step1.** Set the repeat mode to the “Repeat Default” option.




**Step2.** Insert the memory card to the B1080PX, and the B1080PX will play the default file automatically while powered on.

**Step3.** After sensing approaching subjects, the B1080PX will play all the demo files once.

## 11.6 USB AUTO-COPY FUNCTION

**Step1:** Use the “Notepad” to create a file on your PC, and named the file “AUTOCOPY.ini”.

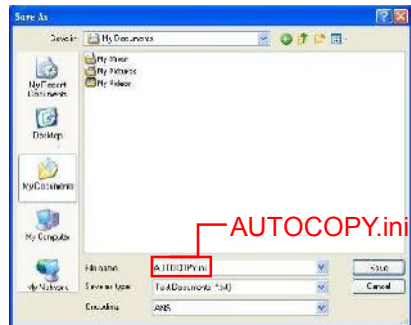



**Step2:** Put the files that you want to copy and the file “AUTOCOPY.ini” to the USB flash driver.

**Step3:** Insert the USB flash driver to the B1080PX, and it will automatically copy the files from USB flash driver to CF card.



## 12. TROUBLESHOOTING

Situation	Check Point
No picture	<ol style="list-style-type: none"> <li>1. Check power cable and power switches.</li> <li>2. Ensure the video cables are connected between the player and the B1080PX.</li> <li>3. Press the “TV MODE” button on the remote control to select the correct output mode.</li> <li>4. Make sure the file format on the memory card is correct.</li> <li>5. Check if the display device is switched to correct video input source.</li> </ol>
No response from the remote control	<ol style="list-style-type: none"> <li>1. Check that the batteries (2 batteries (AAA size) for the remote control is installed correctly.</li> <li>2. Check that there are no obstacles between the remote control and the remote control sensor window.</li> </ol>
No sound	<ol style="list-style-type: none"> <li>1. Check if the mute function is on.</li> <li>2. Check if the volume is set properly.</li> <li>3. Check if audio cable has been connected correctly.</li> </ol>
No responding while pressing the wireless touch – sensor buttons	<ol style="list-style-type: none"> <li>1. Confirm the polarity of the battery.</li> <li>2. Check that there are no obstacles between the touch-sensor buttons and the sensor window.</li> </ol>
Network not working	<ol style="list-style-type: none"> <li>1. Check your IP settings on the Network Setup page. (refer to 7.1)</li> <li>2. If using wired network, make sure the network cable is plugged in on both the B1080PX and your network hub.</li> </ol>

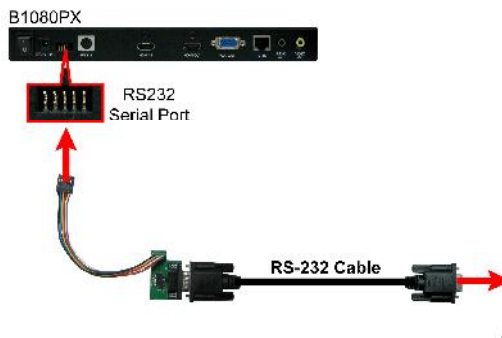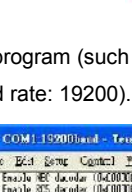Situation	Check Point
<p>Read the system information via RS232</p>	<ol style="list-style-type: none"> <li>Use the special type of RS232 cable to connect the B1080PX to PC's serial port.</li> </ol>  <p><b>Note the direction:</b> There is a identifying mark close to Pin 1</p>  <ol style="list-style-type: none"> <li>Use the terminal program (such as <b>Tera Term</b>) to read the system information of B1080PX (baud rate: 19200).</li> </ol> 